

VUBER®
PULSE
PRO
SMART BATTERY



USER GUIDE

IMPORTANT SAFETY INFORMATION

- Please read this user manual carefully before using the PULSE PRO.
- Keep this manual in a safe place for future reference.
- The PULSE PRO is intended for use with compatible vaping cartridges and accessories.
- Only use the included charging cable and accessories.
- Do not expose the battery to extreme temperature and direct sunlight.
- Keep out of reach of children and pets.
- Do not disassemble or attempt to repair the battery on your own.
- If you experience any issues with the PULSE PRO, discontinue use and contact customer support.



Thank you for purchasing the **PULSE PRO** smart battery designed by **VUBER®**.

Designed to elevate your experience, the PULSE PRO is packed with cutting-edge features, a sleek design, and user-friendly functionality.

Featuring our exclusive “Never Burn” technology, the PULSE PRO allows you to experience the ultimate combination of power and temperature control.

This product manual will guide you through the ins and outs of your PULSE PRO battery, ensuring that you can fully enjoy all the features and benefits it has to offer.

Whether you’re a seasoned vaper, or new to the world of vaping, this manual will be your go-to resource for mastering your PULSE PRO battery and unlocking an exceptional vaping experience.

PACKAGE CONTENTS:

- PULSE PRO battery
- USB-C charging cable
- 1x "Crown" 510 magnetic adapter
- 1x "Flat" magnetic adapter
- User Guide

PRODUCT OVERVIEW

The PULSE PRO is a high-quality and user-friendly battery design for use with 510 vaping cartridges. It features a sleek and ergonomic design with a user-friendly interface, making it easy to use and carry with you wherever you go.

KEY FEATURES:

- Adjustable voltage/temperature settings with Vuber's "Never Burn" technology
- Backlit OLED display
- Dual puff counters
- Dual wireless & USB-C charging
- Magnetic cartridge adapters for strong and reliable connection

PRODUCT OVERVIEW



OLED SCREEN DETAIL



GETTING STARTED

BATTERY CHARGING:

Before using your PULSE PRO for the first time, it's essential to ensure it has a full charge. To charge the battery:

1. Connect the included USB charging cable to the charging port on the bottom of the PULSE PRO.*
2. Plug the other end of the cable into a USB-compatible power source (e.g., a computer or USB wall adapter).
3. THE OLED screen will illuminate while charging. The battery indicator will display the current charge level.
4. Disconnect the charging cable when the battery is fully charged.

*The PULSE PRO can also be charged via wireless charging. Simply place the PULSE PRO flat (with the Vuber logo facing up) on a wireless charger. The OLED screen will illuminate, indicating that the battery is charging.

GETTING STARTED

POWERING ON/OFF:

To turn the battery on or off:

- Click the power button rapidly five times in succession. The OLED screen will light up with the Vuber logo.
- The OLED screen will then display the battery life, temperature setting, and lifetime puff counter.
- Click the power button rapidly five times in succession to turn the battery off.

CARTRIDGE ATTACHMENT:

The PULSE PRO uses a magnetic connection to ensure that your cartridge is securely and consistently connected to the battery.

Two magnetic adapters are included:

- "Crown" Adapter - use with standard diameter cartridges (most 510 carts).
- "Flat" Adapter - use with larger diameter cartridges that will not fit the "Crown" adapter.

GETTING STARTED

CARTRIDGE ATTACHMENT (continued):

1. Select the appropriate adapter for your cartridge. TIP: Most cartridges will use the "Crown" adapter.
2. Carefully screw the cartridge onto the selected adapter.
3. Gently place the cartridge and adapter down into the cartridge chamber; it will magnetically "lock" into place.

HOW TO USE

AUTOMATIC MODE:

The PULSE PRO's default mode is automatic mode, powered by "Never Burn" technology. The battery will automatically select the appropriate voltage for the cartridge, based on the resistance read from the cartridge.

Once a cartridge is attached, the screen will display the selected temperature,

(continued, next page)

HOW TO USE

AUTOMATIC MODE (continued):

After attaching the cartridge, follow these steps to vape:

1. Turn on the PULSE PRO.
2. Press and hold the Power/Draw button while inhaling through the cartridge mouthpiece.
3. Release the power button after inhaling.

The “Never Burn” technology will gently reduce the temperature as you hold the Power/Draw button down, for a maximum of 10 seconds. Once the button is released, the PULSE PRO will return to the initial set temperature.

To change the temperature to your desired level and for additional features, see MANUAL/PRO MODE in the next section of this guide.

HOW TO USE

MANUAL/PRO MODE:

The PULSE PRO temperature/voltage can be precisely adjusted to your preferred level, while still utilizing the “Never Burn” technology. To adjust the temperature:

1. Press the “Power/Select” button three times rapidly.
2. The PULSE PRO temperature will flash on the display, indicating that it is in “Manual” mode.
3. Press the “Up” button to increase the temperature level. Press the “Down” button to decrease the temperature level.
4. Once the desired temperature level is reached, press the “Power/Draw” button once to confirm and set the temperature.
5. Press the “Power/Draw” button while inhaling on the cartridge mouthpiece to produce vapor.

HOW TO USE

MANUAL/PRO MODE (continued):

6. Release the power button after inhaling.

The “Never Burn” technology will gently reduce the temperature as you hold the Power/Draw button down, for a maximum of 10 seconds. Once the button is released, the PULSE PRO will return to the initial set temperature.

ADDITIONAL SETTINGS/FUNCTIONS:

The PULSE PRO will display the temperature, lifetime puff count, and battery level on the default screen.

To view additional settings, press the “Down” button once - the display will adjust and show the Voltage, Wattage, Resistance, and session puff counter, as well as the current battery life.

HOW TO USE

MANUAL/PRO MODE (continued):

The session puff counter can be used to track your usage over a certain period of time, and can be manually reset. To reset the session puff counter:

1. Press the "Down" button once to display the secondary screen.
2. Press and hold the "Down" button for three seconds, then press the "Down" button once to reset the counter.
3. Press the "Power/Draw" button to return to the main screen.

The lifetime puff counter (displayed along with temperature) on the default screen can not be reset.

The temperature on the PULSE PRO can also be set to Celsius. Press the "Power/Draw" button two times to change between °F and °C modes.

CLEANING & CARE

CLEANING THE BATTERY:

Keep the PULSE PRO clean and free from any liquids or residue to maintain its optimal performance.

Use a cotton swab or soft cloth lightly dampened with a small amount of isopropyl alcohol to clean the battery exterior and connectors.

It is recommended to clean the magnetic adapter(s) and battery connection after each session. If the battery is not in regular use, it is recommended to store the battery and the cartridge separately.

Cartridges may accumulate residue with use. Clean the mouthpiece and the exterior of the cartridge with cotton swab or cloth with a small amount of isopropyl alcohol.

CLEANING & CARE

TROUBLESHOOTING:

The PULSE PRO was designed to be used with 510 cartridges, but not all cartridges are made the same. The PULSE PRO will display error messages on the OLED display if there is a connection error with the attached cartridge:

- **NO ATOMIZER** - There is a connection issue with the cartridge. Make sure the cartridge and magnetic adapter are clean and free of debris. Ensure that the cartridge is not over-tightened in the magnetic adapter. Try to loosen the connection between the adapter and cart by a quarter turn counter-clockwise.
- **SHORTED** - There is an issue with the cartridge and the battery can not make a proper connection. Try the same steps as the NO ATOMIZER message.

CLEANING & CARE

TROUBLESHOOTING (continued):

- **SHORTED** (continued)
If you attempt the outlined steps and still receive the SHORTED error, please contact Vuber Support.
- **LOW BATT** - The battery is low and will not function until recharged. Connect to supplied USB-C cable or place battery on wireless charger.

SAFETY PRECAUTIONS

- Do not expose the battery to extreme temperatures.
- Keep the battery away from water or any liquids.
- Store the battery in a temperate, dry place when not in use.
- Use only compatible vaping cartridges and accessories.
- Do not charge the battery unattended or overnight.
- If the battery becomes hot to the touch, discontinue use.

LIMITED LIFETIME WARRANTY

Vuber Technologies is proud to offer a limited lifetime warranty on all Vuber devices. To qualify for a warranty claim, register your product within 30 days of purchase. To register or submit a warranty claim, please visit us at VuberVaporizers.com

- Approved warranty claims are typically processed within 3-5 business days.
- A shipping and handling fee applies to EACH item being warrantied.
- Cartridges, atomizers, and heating coils will need to be replaced over times, and are not covered under warranty.
- Please retain your receipt to qualify for warranty replacement.
- Instruction videos are available under each product page on VuberVaporizers.com
- Damage caused by improper use, physical abuse, moisture exposure, or any activity other than vaping will not be covered under warranty.
- Loss and theft are not covered under warranty.

